

Vinyl Fence in-a-box

Privacy

Part # FPV101-White
Part # FPV101A-Tan

Kit Contains

- 1 2" X 6" Top Routed Rail
- 1 2" x 6" Bottom Ribbed Routed Rail
- 12 Boards

Parts Needed but Not Included

Genova Vinyl Adhesive

Post Tops  Ball Post Top  New England Post Top  Solar Light Post Top  Gothic Post Top  Bevel Post Top

4" x 96" Routed End, Corner, & Line Posts (White/Tan-FW/FA075E, FW/FA075C, FW/FA075L)

4" x 108" Routed End, Corner, & Line Posts (White/Tan-FW/FA076E, FW/FA076C, FW/FA076L)

NOTE: YOU SHOULD WEAR SAFETY GLASSES AND GLOVES WHEN WORKING WITH THIS PRODUCT.

Genova Vinyl Fence exceeds national building code requirements. Building codes vary in different areas so be sure to consult your local building department for codes and regulations for fence installations.



Project Preparation

- Tools you will need include a carpenter level, a corner level, string, drill with 1/4" drill bit, tape measure, pencil, stakes, and spray paint to mark the ground.
- Stake the ground to locate the proper location of the Fence Posts. To keep Posts in line, stretch a string line between the stakes and align the posts to the string.
- Before setting Posts determine what type of Post (line, end, or corner) is needed at each post location.
- Drill three 1/4" drainage holes through the bottom of the Bottom Rail, making sure to drill through both ribs.

Installation Instructions

1. Set Posts and Attach Rails...

- Mark the ground where the first Post will be installed. Measure 71-1/8" from the inside of one Post to the inside of the next Post.
- Dig the two post holes 30" deep (42" deep for 108" Posts), pour 6" of gravel into each hole, mark a pencil line 24" (36") from the bottom on each Post, fill holes with concrete, and place Posts in holes (see illustration). Do not bury Posts deeper than 24" (36") to allow a 2" clearance between the ground and the Bottom Rail.
- Slide the Bottom 2" x 6" Ribbed Rail into the routed holes on the bottom of the Posts with the routed opening facing up.
- Before proceeding make sure Posts are level and plumb (using a post or carpenter level) and spaced precisely 71-1/8".
- Slide the Hollow 2" x 6" Rail into the top routes of the Posts with the routed opening facing down.
- After the Posts and Rails are in place and cement has cured, drill a 1/4" drainage hole approximately 1" from the ground into the post, between the ground and the Bottom Rail.
- When installing more than one section of fence, repeat the process above, digging post holes and assembling sections as you go. Slide the Rails into the new Post first, then into the Post connected to the assembled section.

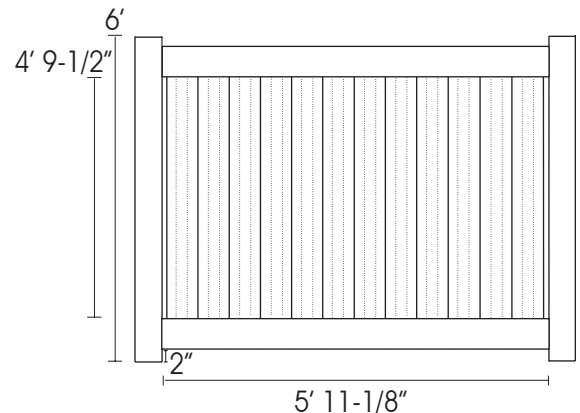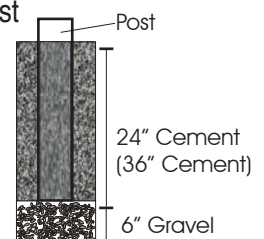



Part # FPV101-White

Part # FPV101A-Tan

Installation Instructions (Continued)

2. Insert Boards . . .

- Start on one side of the fence section and slide the first Board up into the Top Rail and lock the notched end into the Bottom Rail. Slide the first Board to the middle of the fence section to aid in holding the slot open.
- Repeat the same installation process with the rest of the Boards, sliding them into position as you proceed. (Make sure all notched ends are facing the same direction.)

3. Add Decorative Post Tops . . .

- Apply a small amount of Genova Vinyl Adhesive to the inside bottom surface of the Post Top, where the Top contacts the Post.
- Attach the Post Top, hold for 15 seconds, and wipe off any excess Adhesive.
- Repeat above instructions for all Post Tops.