

# Vinyl Fence in-a-box

## Lattice Top Privacy

Part # FPL101-White

Part # FPL101A-Tan

### Kit Contains

- 1 2" x 4" Top Rail w/ Attached U-Channel
- 1 2" x 6" Middle Routed Rail w/ Attached U-Channel
- 1 2" x 6" Ribbed Routed Bottom Rail
- 1 12" Privacy Lattice Sheet
- 12 Boards

### Parts Needed but Not Included

Genova Vinyl Adhesive

Post Tops  Ball Post Top  New England Post Top  Solar Light Post Top  Gothic Post Top  Bevel Post Top  
 4" x 96" Routed End, Corner, & Line Posts (White/Tan-FW/FA077E, FW/FA077C, FW/FA077L)

**NOTE: YOU SHOULD WEAR SAFETY GLASSES AND GLOVES WHEN WORKING WITH THIS PRODUCT.**

**Genova Vinyl Fence exceeds national building code requirements. Building codes vary in different areas so be sure to consult your local building department for codes and regulations for fence installations.**


### Project Preparation

- Tools you will need include a carpenter level, a corner level, string, rope, drill with 1/4" drill bit, tape measure, pencil, stakes, and spray paint to mark the ground.
- Stake the ground to locate the proper location of the Fence Posts. To keep Posts in line, stretch a string line between the stakes and align the posts to the string.
- Before setting Posts determine what type of Post (line, end, or corner) is needed at each post location.
- Drill three 1/4" drainage holes through the bottom of the Bottom Rail, making sure to drill through both ribs.

### Installation Instructions

#### 1. Set Posts and Insert Bottom Rail . . .

- Mark the ground where the first Post will be installed. Measure 71-1/8" from the inside of one Post to the inside of the next Post.
- Dig the two post holes 30" deep, pour 6" of gravel into each hole, mark a pencil line 24" from the bottom on each Post, and place posts in holes (see illustration). Temporarily support the posts. Wait to backfill holes with concrete until sections are completely assembled.
- Slide the Bottom 2" x 6" Ribbed Rail into the routed holes in the bottom of the Posts, with the routed opening facing up.

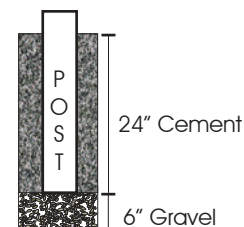


#### 2. Attach Lattice and Top/Middle Rails . . .

- Lay the 2" x 6" Middle Rail and the 2" x 4" Top Rail flat on the ground so they are approximately 12" apart and parallel to each other, with the attached U-Channels facing each other.
- Insert the Lattice into both U-Channels, making sure the Lattice is flush with the U-Channel ends.
- Cinch the fence section together using a piece of rope. This will hold the entire section together while moving it into place.
- Lift the assembly and insert the Top and Middle Rails into the top and middle openings in the Posts.

#### 3. Insert Boards . . .

- Start on one side of the fence section and slide the first Board up into the Middle Rail and lock the notched end into

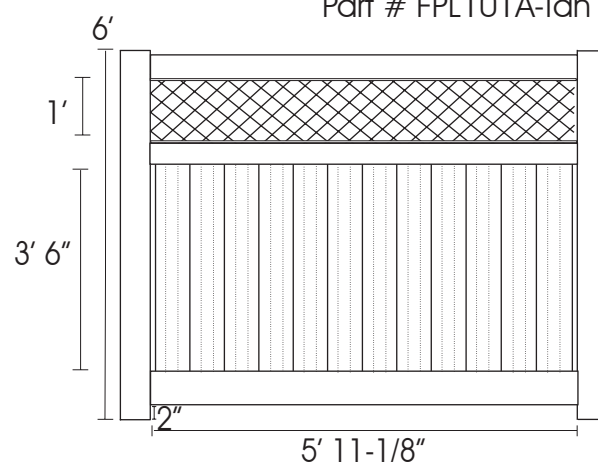

Contact Genova Products with any questions:  
 (800) 521-7488 or email [inquiries@genovaproducts.com](mailto:inquiries@genovaproducts.com)

Form# 253507 5/07

# Vinyl Fence in-a-box

## Lattice Top Privacy

Part # FPL101-White

Part # FPL101A-Tan

### Installation Instructions (Continued)

the Bottom Rail.

- Slide the first Board to the middle of the fence section to aid in holding the slots open.
- Repeat the same installation process with the rest of the Boards, sliding them into position as you proceed.

#### 4. Secure Fence Section...

- Fill the post holes with concrete. Do not bury Posts deeper than 24" (this will allow a 2" clearance between the ground and the Bottom Rail).
- Place a level on the Bottom Rail and Posts. If necessary, adjust Posts to a level and plumb position before concrete hardens.
- After the concrete has cured, drill a 1/4" drainage hole approximately 1" from the ground into the Posts, between the ground and the Bottom Rail.

#### 5. Add Decorative Post Tops. . .

- Apply a small amount of Genova Vinyl Adhesive to the inside bottom surface of the Post Top, where the Top contacts the post.
- Attach the Post Top, hold for 15 seconds, and wipe off any excess Adhesive.
- Repeat the above instructions for all remaining Post Tops.