

# Vinyl Fence in-a-box

## Shadowbox

Part # FSB101-White

### Kit Contains


- 1 2" x 6" Top Routed Rail
- 1 2" x 6" Middle Routed Rail (routed on both sides)
- 1 2" x 6" Bottom Routed Rail
- 30 1" x 6" Boards

### Parts Needed but Not Included

Genova Vinyl Adhesive

Post Tops  Bevel Post Top  New England Post Top  Internal Bevel Post Top

5" x 108" Routed End, Corner, & Line Posts (FW679E, FW679C, FW679L)

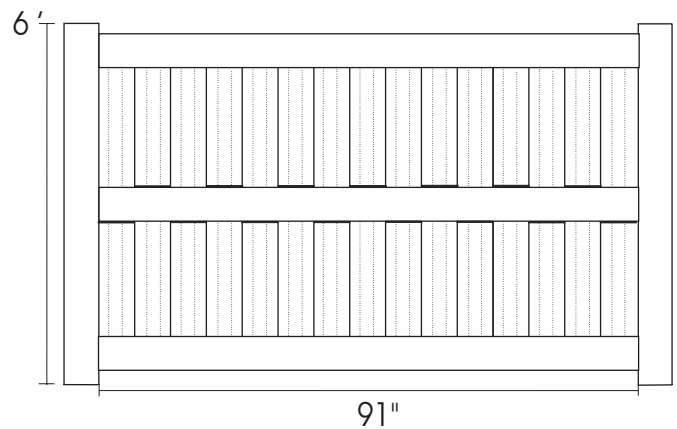

**NOTE: YOU SHOULD WEAR SAFETY GLASSES AND GLOVES WHEN WORKING WITH THIS PRODUCT.**

**Genova Vinyl Fence exceeds national building code requirements. Building codes vary in different areas so be sure to consult your local building department for codes and regulations for fence installations.**


### Project Preparation

- Tools you will need include a carpenter level, a corner level, string, rope, drill with 1/4" drill bit, tape measure, pencil, stakes, and spray paint to mark the ground.
- Stake the ground to locate the proper location of the Posts. To keep Posts in line, stretch a string line between the stakes and align the Posts to the string.
- Before setting Posts determine what type of Post (line, end, or corner) is needed at each post location.
- Drill three 1/4" drainage holes through the bottom of the Bottom Rails, making sure to drill through both ribs.

### Installation Instructions

#### 1. Set Posts...

- Mark the ground where the first Post will be installed. Measure 91" from the inside of the first Post to the inside of the next Post.
- Dig the two post holes 42" deep, pour 6" of gravel into each hole, mark a pencil line 36" from the bottom on each Post, and place Posts in holes (see illustration). Do not bury Posts deeper than 36" to allow a 2" clearance between the ground and the Bottom Rail. Wait to backfill the holes with concrete until sections are completely assembled.

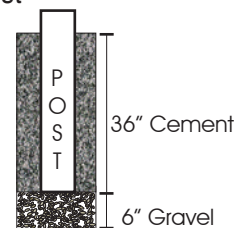

#### 2. Assemble Section...

- Lay rails on a flat surface.
- Start with the Bottom Rail with the routed holes facing up.
- Snap the notched boards into the routed holes of the Bottom Rail.
- Snap the notched boards you just placed in the Bottom Rail into the bottom of the Middle Rail.
- Snap the remaining notched boards into the top of the Middle Rail
- The Top Rail should lay with the routed holes facing down.
- Snap the notched boards into the bottom of the Top Rail.
- Make sure orientation of the rails are consistent throughout each fence section.
- Lift the entire section and slide the Rails into the routed post holes.
- If you are installing more than one section of fence, repeat the process above, digging post holes and assembling sections as you go. When attaching fence sections, slide the Rails into the new Post first, then into the Post connected to the assembled section.

Contact Genova Products with any questions:  
(800) 521-7488 or email [inquiries@genovaproducts.com](mailto:inquiries@genovaproducts.com)

Form# 253555 5/07

# Vinyl Fence in-a-box

## Shadowbox

### Installation Instructions (Continued)

#### 3. Secure Fence Section . . .

- Fill the post holes with concrete.
- Place a level on the Bottom Rail. If necessary adjust Posts to level and plumb position before concrete hardens.
- After concrete has cured, drill a 1/4" drainage hole approximately 1" from the ground into the Post, between the ground and the Bottom Rails.

#### 4. Add Decorative Post Tops . . .

- Apply a small amount of Genova Vinyl Adhesive to the inside bottom surface of the Post Top, where the Top contacts the Post.
- Attach the Post Top, hold for 15 seconds, and wipe off any excess adhesive.
- Repeat the above instructions for all remaining Post Tops.